
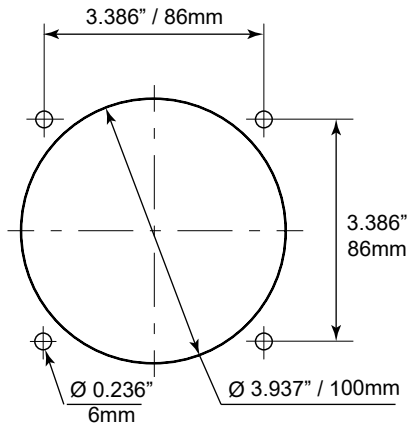


HLS-110-SEQ Phase Sequence / Loss Meter

Dimensional Drawing

Reference only

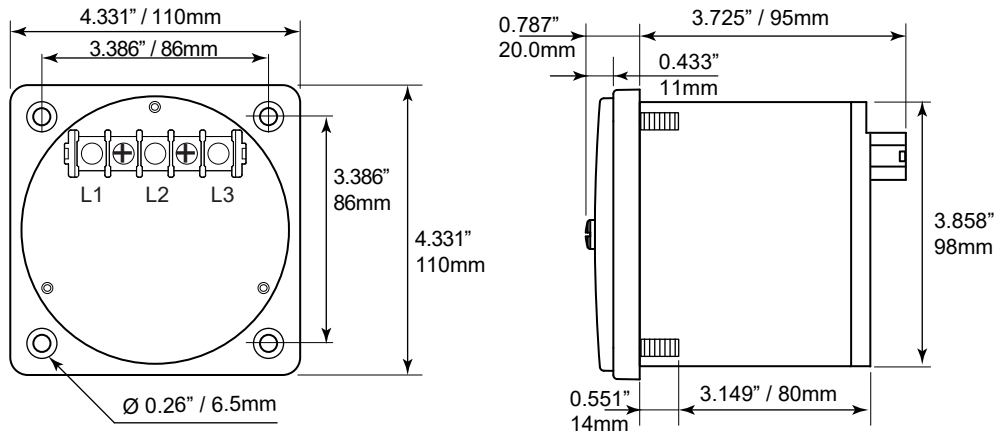

PANEL CUT-OUT